

Xvision Onvif-Integration

Camera Driver Information

Channel name

Please input a name that is unique throughout the domain.

Community Source

Driver IP Cam Webcam(DirectShow)
 RTSP video source Remote channel
 ONVIF Camera Find more on Community...

Description

Domain name

Enter camera IP address **Port** **Channel**

Enter login information **Password**

Basic Recording Unconditional recording

Others Disabled

1

Kamera Bezeichnung eingeben

2

ONVIF als Treiber wählen

3

IP-Adresse der Kamera eintragen
Port **8000** eintragen

4

Username/Passwort eintragen



Genius Vision NVR

Xvision RTSP-Integration

Camera Driver Information

Channel name

Please input a name that is unique throughout the domain.

Community Source

Driver IP Cam Webcam(DirectShow)
 RTSP video source Remote channel
 ONVIF Camera Find more on Community...

Description

URL

Use TCP streaming

Enter login information **Password**

Basic Recording Unconditional recording

Others Disabled

1 Kamera Bezeichnung eingeben

2 RTSP als Treiber wählen

3 RTSP URL eintragen

4 Username/Passwort eintragen

3 URL zum Video-Stream `rtsp://192.168.0.109:554/ch01.264`

Kamera-IP-Adresse Port



Genius Vision NVR